

HEATEC TEC-NOTE

Publication No. 1-10-213

SAFETY Firestorm™ water heaters

Following the instructions in the Tec-Notes applicable to Firestorm water heaters will help you avoid serious injury or death.

Read each Tec-Note in its entirety before performing operations it covers.

Hazard messages are included at appropriate places throughout these Tec-Notes. Safety may also be affected by the

sequence of step-by-step instructions. So don't change their sequence or skip steps unless you are sure it is safe to do so.

Danger and warning messages also appear on decals at appropriate locations on Firestorm heaters. They identify known hazards, their severity and how you can avoid them. Pay special attention to them. They are shown below to increase your awareness.

⚠ DANGER



SHOCK HAZARD. Hazardous voltage is present inside this panel. Contact with it will cause death or serious injury.

Disconnect and lock out electrical power to this panel before opening the panel door.

⚠ PELIGRO

RIESGO DE ELECTROCUCION. Hay niveles peligrosos de voltaje dentro de este tablero. El contacto causará la muerte o lesiones graves.

Desconectar y bloquear la alimentación eléctrica suministrada a este tablero antes de abrir su puerta.

Part No. 5014130


⚠ WARNING



Beware of hot parts. Do not touch burner firing chamber, heater shell, valves, or piping, etc with bare hands when heater is in operation. Their surfaces may exceed 300 degrees F (149 degrees C) and can cause severe burns resulting in serious injury or death. Wear heat resistant gloves when you must work on hot parts or drain hot fluid from the heater.

Part No. 5010261

⚠ WARNING



To ensure that the flame scanner is working properly, manually restart the heater twice daily. If the scanner is not working properly it will prevent a restart and should be replaced. Never disconnect the scanner temporarily to restart the heater. That would prevent it from shutting off fuel in case of a flame failure. This could cause an explosion and fire, causing injury or death.

⚠ ADVERTENCIA

Para asegurar que el explorador de llamas funciona correctamente, rearrancar el calentador manualmente dos veces por día. Si el explorador no funciona correctamente, se impedirá el re arranque de la unidad. En tal caso, sustituirlo. Nunca desconectar el explorador de modo temporal para poder re arranque el calentador porque entonces no se cortaría el suministro de combustible en caso de apagarse la llama. Esto podría ocasionar una explosión o incendio y causar lesiones personales o la muerte.

Part No. 5014131